IBM Distributed Power Interconnect (DPI) Upgrade Instructions

This is for the following DPIs.

IBM DPI C13 Enterprise PDU+ (w/ power Montoring) w/o Line Cord 39M2816 IBM DPI Power Distribution Unit Plus (PDU+) 39M2817 IBM DPI C19 Enterprise PDU+ (w/ power Montoring) w/o Line Cord 39M2818 IBM DPI 60amp / 208V 3 phase C19 Enterprise PDU+(w/Power Montoring) (60Amp) with fixed line cord 39M2819

Note:

PDU must <u>already</u> be <u>configured</u> for and <u>operating</u> from the <u>network</u> you are connected too prior to upgrading.

1) <u>Launch the tool PDU_Upgrade.exe</u> (version 1.05 or higher) <u>from a PC connected on</u> the same subnet as the unit.

🍸 Upgrade I	PDU Upgrade Utility \	/01.02				_ 🗆 🗙			
Network Upg	rade								
PDU List									
IP Address	PDU serial number	MAC Address	IAC Address Version		Password	Ci			
1									
Set IP Browse Add Modify Remove Discover									
-Image Information									
Version No	Version No. Date: File Size: Upgrade								
Filo Namo:		,		,					
						pen			
0.4									
Zuit									

2) Click "Discover" to find the units on your subnet

IP Address	MAC Address	Version	Account	Password	Card	
10.222.45.190	00-e0-d8-ff-89-d7	0.80	USERID		IBM DPI	
10.222.45.196 10.222.45.191	00-e0-d8-ff-89-da 00-e0-d8-ff-89-e7	0.80	USERID		IBM DPI	
mage Informa /ersion No.	Set IP	Browse	Add	Modif	y <u>R</u> en	nove Discove

(NOTE: Image above is from an older version of the upgrade tool but is still very similar)

3) Double click on a unit from the list to be upgraded and enter the PDU admin account & password which is USERID & passw0rd by default (customer may have changed it). Click OK when done.

IP Address :	10.222.45.190
<u>A</u> ccount :	USERID
Password :	

4) Select "Open" then select the file *.bin included in the zip

•	Set IP	Browse	Add	Modify	Remove	Discover		
−Image Inform Version No. File Name:	ation	Date:		File Size:		Upgrade Open		
			Quit					? X
			Look jn: 🔁	V0207.0000 7_2M.BIN		. ← E	<u>–</u> *	

File <u>n</u>ame:

SP4_v0207_2M.BIN

Files of type: Binary Files(*.bin)

<u>O</u>pen Cancel

•

5) The upgrade button will now be available, click the <u>"Upgrade"</u> button to begin the <u>flash</u> upgrade process. (Note: <u>If you highlight multiple units they will all be upgraded</u> <u>simultaneously</u>)

When the upgrade starts you will see progress bar until the upgrade is complete.



Once complete, you will get a final message similar this indicating upgrade was successful.



The upgrade is complete you can select OK and close the program. The PDU microprocessor will reset and automatically recover to normal operation in about 2 minutes.